

# INSTALLATION GUIDE

Factbird® EDGE

## Factbird® EDGE Hardware Setup

		
① Factbird® EDGE	② Required peripheral e.g. USB camera	③ Power supply unit


**Note:** Connecting devices to your IT network with a strict firewall may require whitelisting

Please refer to our support page for [information on network firewall requirements](#).  
If you require further details, please contact [support@factbird.com](mailto:support@factbird.com).

# 1

## Connecting a peripheral (e.g. USB camera) and power supply unit

1. Connect the antennas to Factbird® EDGE ①.
2. Connect the power supply unit ③ to Factbird® EDGE.
3. Connect the desired peripherals ② (e.g., cameras) to Factbird® EDGE.
4. Plug in the power. The power button should turn green.

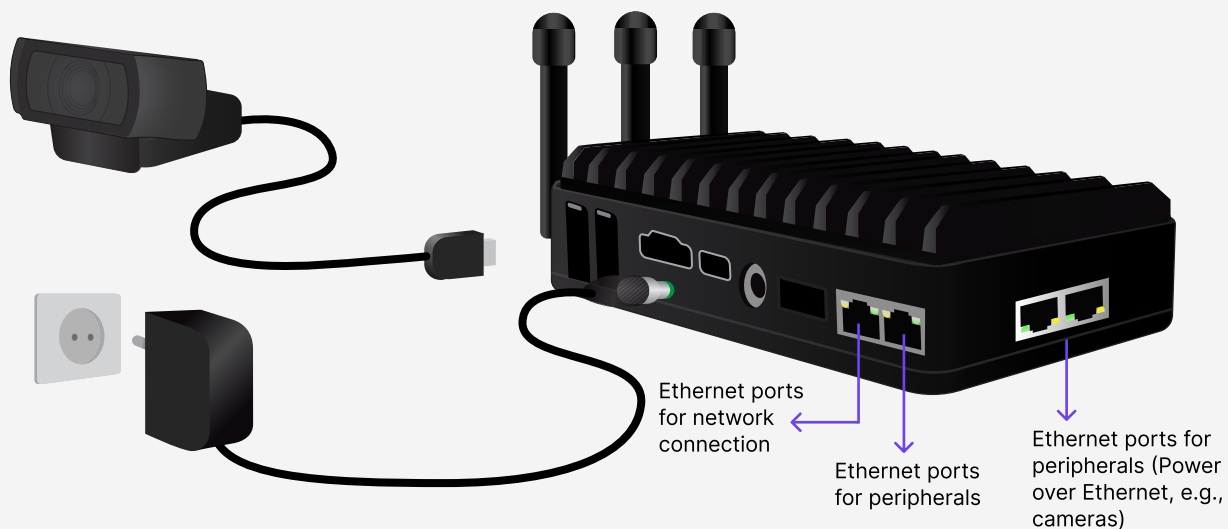

# INSTALLATION GUIDE


## Factbird® EDGE

# 2

### Connecting Factbird EDGE to the internet

1. Connecting to the internet via Ethernet or Wi-Fi.

Using Ethernet

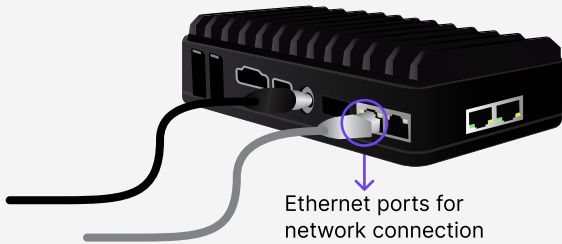

Connect an Ethernet cable to Factbird® EDGE's Ethernet port.

**Important:** Make sure you plug into the correct port.

or Using Wi-Fi



After about a minute, a Wi-Fi hotspot named 'Factbird-EDGE-xxxxx' will appear on your smartphone, computer, or tablet.

Connect to the hotspot. You will be redirected to a page where you can select your company's Wi-Fi network and enter the password.

2. Confirm that the LED indicator turns green. Please give the device 1-2 minutes to establish a full connection.

- Blinking LED indicates no internet connection.
- Solid LED indicates that the internet connection is established.

*Note: Factbird® EDGE works with WiFi where users select Wi-Fi and enter password. (Not applicable for Wi-Fi that requires authentication using captive portal including WPA2-Enterprise. e.g. Wi-Fi that requires registration on a browser)*

# 3

### Mounting at production line

1. Mount Factbird® EDGE and the peripheral at production line.
2. Place the Factbird® EDGE where it receives good Wi-Fi (in case of using Wi-Fi).

